

Heated oxygen sensor, removing and installing

- Disconnect heated oxygen sensor harness connector

Component locations ⇒ [page 24-1](#) .

- Open tie wrap.
- Remove heated oxygen sensor.

When installing a heated oxygen sensor, note the following:

- Install tie wraps in original locations, to prevent sensor wiring from contacting exhaust system.
- Coat oxygen sensor threads with anti-seize compound but do not allow compound to enter sensor slots.

Tightening torque: 50 Nm (37 ft lb)