


87-184

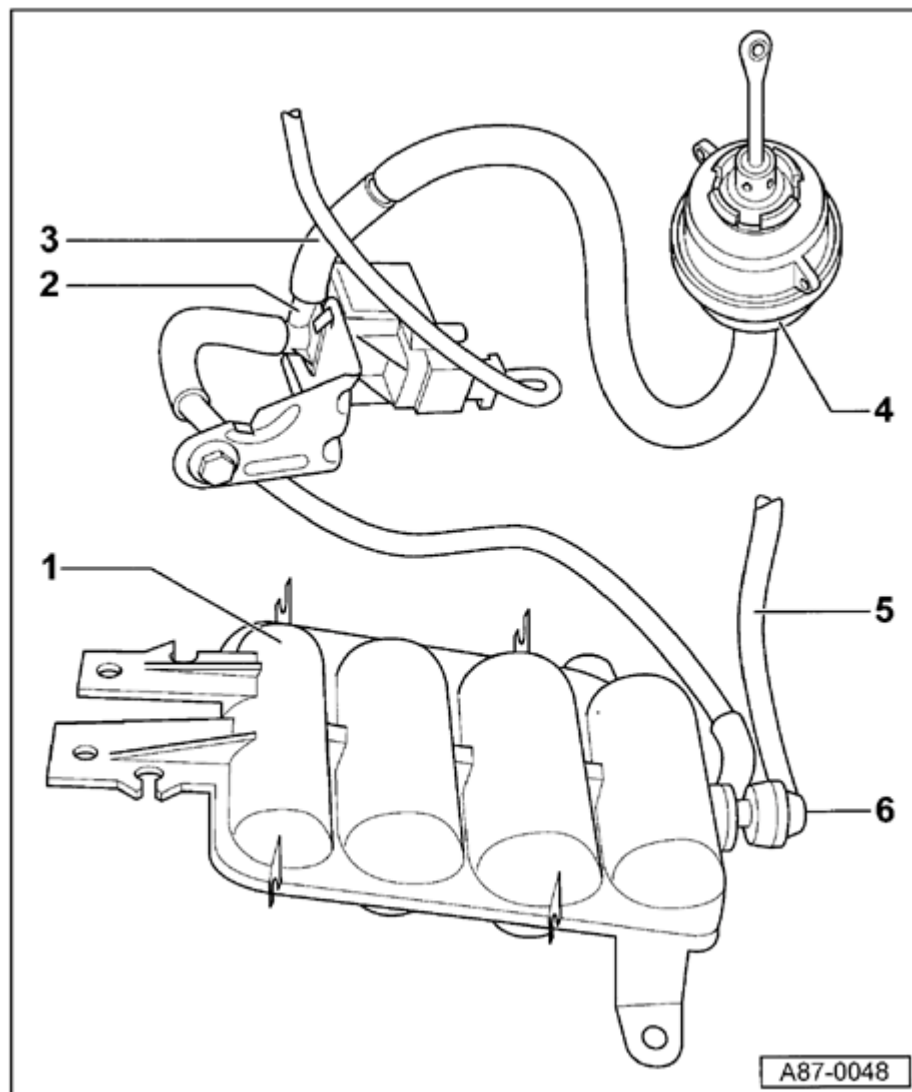

## Vacuum system, hose layout

### Note:

Testing vacuum system ⇒ [page 87-187](#) .

#### 1 - Vacuum reservoir

◆ Removing and installing ⇒ [page 87-188](#)

#### 2 - Two-way valve for fresh/ recirculating air flap -N63-

◆ Removing and installing ⇒ [page 87-142](#)

#### 3 - Restrictor

#### 4 - Fresh/recirculating air flap vacuum unit

◆ Removing and installing ⇒ [page 87-186](#)

#### 5 - Vacuum supply hose from engine

#### 6 - One-way valve

◆ Removing and installing ⇒ [page 87-188](#)