

## Parking brake cables for front-wheel-drive vehicles, removing and installing


### Additional information

Repair Manual, Body-Exterior


Repair Manual, Body-Interior

### Removing


- Remove both rear wheels.
- A** - Remove heat shield (arrows) in center tunnel.

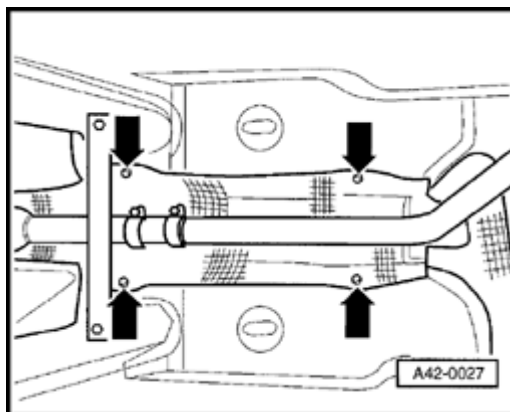

- A** - Remove locking element -D-.
- Counter hold hex -E- using 13 mm open end wrench and turn adjusting nut -C- in to stop.
- Slide cable adjuster together (arrow -B-).

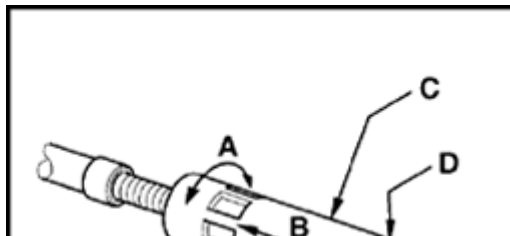


46-30

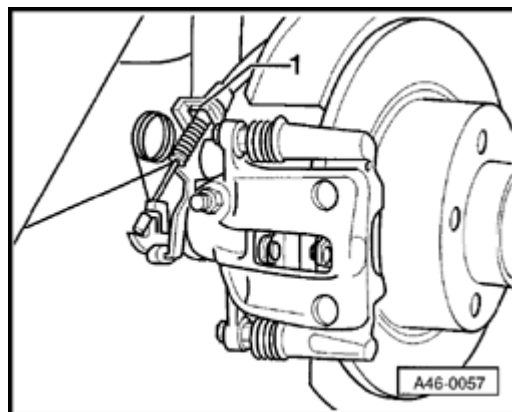

- A**
- Pull out locking clip -1-.
  - Remove parking brake cables at brake caliper.


**Note:**

*Do not damage the parking brake cable boot when removing and installing.*

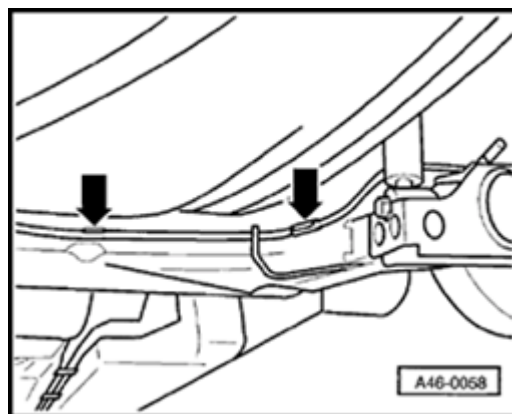


- A**
- Remove parking brake cables from brackets (arrows) at rear axle beam.

46-31

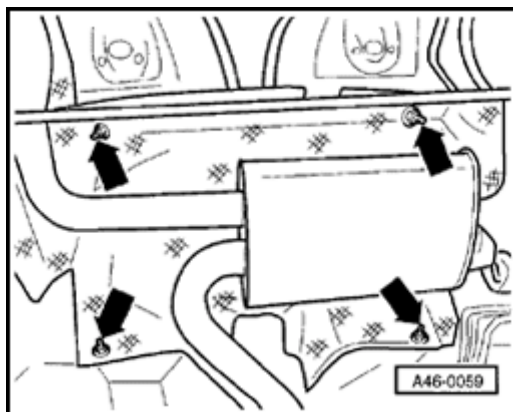


- A - Remove heat shield (arrows) at rear muffler and push to side.

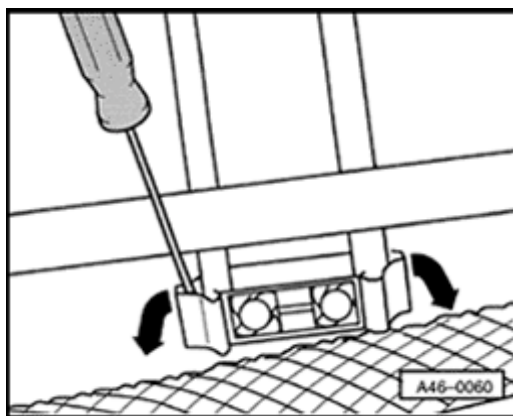


- A - Open cable clamp (arrows) and remove parking brake cables.

46-32

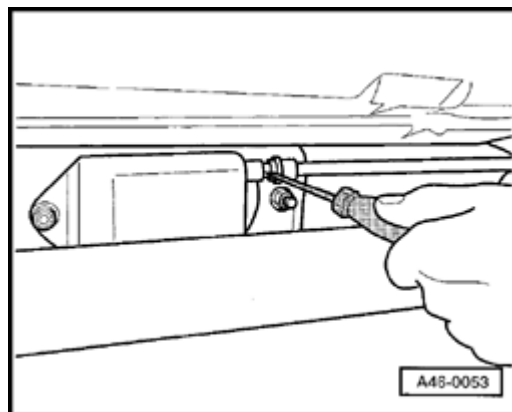


- A**
- Use screwdriver to pry parking brake cable out of bracket.

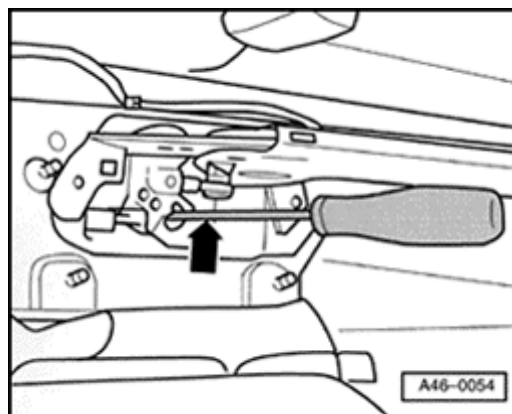

- A**
- Remove rear part of center console.  
⇒ [Repair Manual, Body-Interior, Repair Group 68](#)
  - Using screwdriver, push parking brake cables toward parking brake lever and press ball stud out of bracket.
  - Remove parking brake cables.

## Installing

- Remove any plastic parts at compensating bar; they do not need to be re-installed.

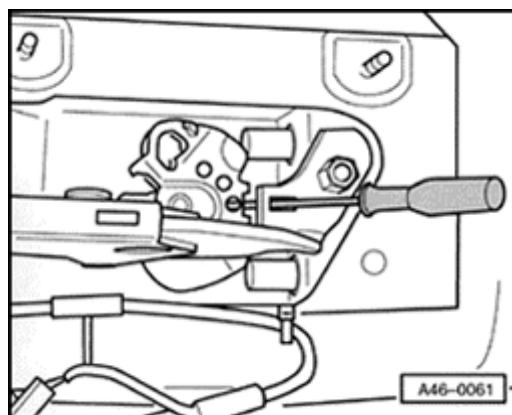**A**

- Lock compensating bar to prevent it from turning (size 2 screwdriver).
- Insert cable ball stud through mounting in adjustment bracket.
  - Parking brake cable must lock into place in bracket.
- Install parking brake cables to rear axle beam.
- Adjust parking brake ⇒ [page 46-39](#) .
- Install rear part of center console.

⇒ [Repair Manual, Body-Interior, Repair Group 68](#)