



40-101

## Stabilizer bar, removing and installing

### Removing

- Remove noise insulation panel.
- Remove nuts -1-.
- Remove connecting links from stabilizer bar.
- Remove nuts -2-.

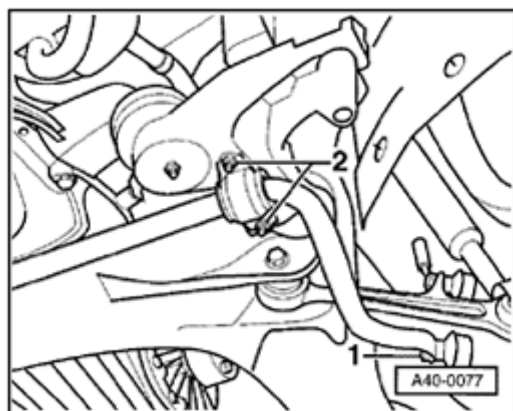

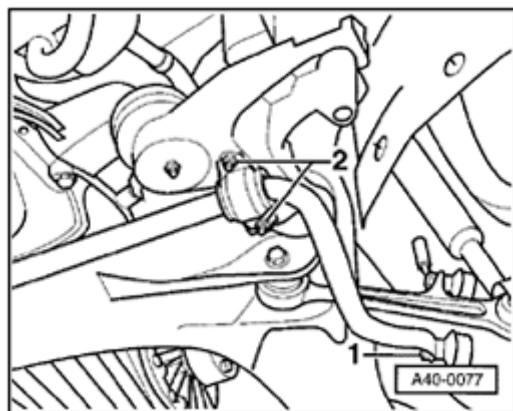

### Installing

A

- Install bushings and stabilizer bar.
  - ◆ Do not apply grease
  - ◆ Arrows on connecting links point in direction of travel
- If replacing stabilizer bar, check which suspension version vehicle is equipped with.

Tightening torques:

- ◆ Connecting link to stabilizer bar: 100 Nm (74 ft lb) (always use new ribbed nuts)
- ◆ Nuts -2-: 25 Nm (18 ft lb) (always replace)