

## Read Measuring Value Block (scan tool function 08)

### Notes:

*There are two types of transmissions:*

- ◆ 1. *Transmissions with hydraulic control -E17-:  
The sensor for transmission RPM (inductive sensor) is secured to the bottom of the valve body.*
  
- ◆ 2. *Transmissions with hydraulic control -E18/2-:  
The sensor for transmission RPM (hall effect sensor) is secured to the transmission housing behind the valve body.*

*Information about which transmission is installed*

⇒ [Repair Manual, 5 Spd. Automatic Transmission 01V, Repair Group 00, engine codes, engine/transmission allocation, ratios, equipment](#)

**Read measuring value block for transmission with hydraulic control -E17- ⇒ [page 01-187](#)**

**Read measuring value block for transmission with hydraulic control E18/2 ⇒ [page 01-228](#)**