


## DTC Memory, checking

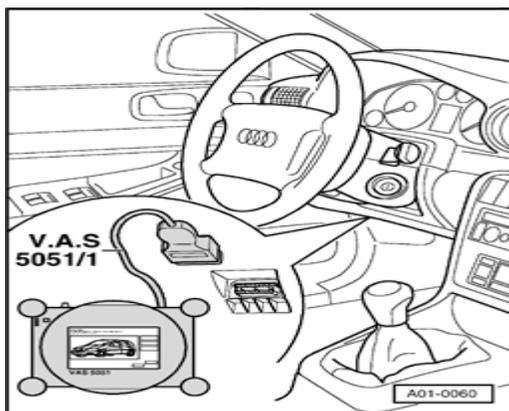

Rapid data transfer      HELP  
Select function XX

Rapid data transfer      Q  
02 - Check DTC memory

X DTCs recognized!

- ▲ - Connect Vehicle Diagnosis, Measuring and Information System VAS 5051 to vehicle using VAS 5051/1 diagnostic wire, or use V.A.G 1551 Scan Tool with VAG 1551/3 adapter.
- ▲ - Advance until "Select function XX" appears in the display ⇒ [page 01-36](#).

- ▲ Indicated on display:
  - Press keys 0 and 2. (The function "Check DTC memory" is selected with 02).

- ▲ Indicated on display:
  - Press Q button to confirm entry.

- ▲ The number of malfunctions stored or "No DTC recognized!" will be shown on the display.

- Press the → key.

Stored DTCs will be displayed and printed out one after the other.

- Repair malfunctions, after displaying and printing out the last

malfunction according to DTC table ⇒ [page 01-45](#) .

- Press the → key.

Rapid data transfer

HELP

Select function XX



Indicated on display:

**Note:**

*After DTC memory has been checked and malfunctions have been repaired:*

- Erase DTC memory