

00-26

## Roll starting and towing, notes

### **WARNING!**

***When towing the vehicle, selector lever must be in position N and the vehicle must not be towed for more than 50 km and no faster than 50 km/h, otherwise the transmission will be damaged.***

### **Note:**

*Roll starting the engine is not possible (e.g. if the battery is too weak or the starter does not work).*