


## Transmission oil level, checking

### Special tools and equipment

- ◆ 17 mm wrench insert hex socket or
- ◆ 3357 triple square socket driver

### Notes:

- ◆ *The oil filler plug is on the left of the transmission below the speedometer vehicle speed sensor and may be concealed by the heat shield for the drive axle.*
- ◆ *Depending on the version installed, use either 3357 triple square socket driver or a 17 mm to loosen the oil filler plug.*
- ◆ *Use 3357 triple square socket driver to loosen the oil drain plug.*

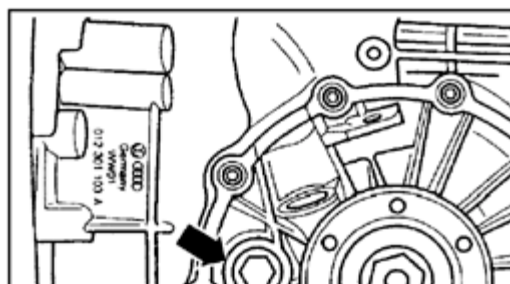

- To check oil level, remove oil filler plug (arrow).  
Specification: Oil level up to bottom of filler hole
- Top off transmission oil if necessary.  
Specification ⇒ [Page 00-3](#)

- Install oil filler plug.

Tightening torque: 25 Nm (18 ft lb)