



Reverse idler gear, removing and installing

1 - Circlip

2 - Washer

3 - Reverse idler gear

- ◆ Different versions, allocation ⇒ [Fig. 24, Page 35-43](#)

4 - Needle bearings for reverse idler gear

5 - Thrust washer

6 - Transmission cover

- ◆ With reverse idler gear shaft (arrow)
- ◆ To remove reverse idler gear it is not necessary to remove reverse idler gear shaft.
- ◆ Reverse idler gear shaft is not available as replacement part

7 - Torx[®] bolt

- ◆ 35 Nm (26 ft lb)
- ◆ Serves as additional method of securing reverse idler gear shaft