


39-84

Oil level in rear final drive, checking

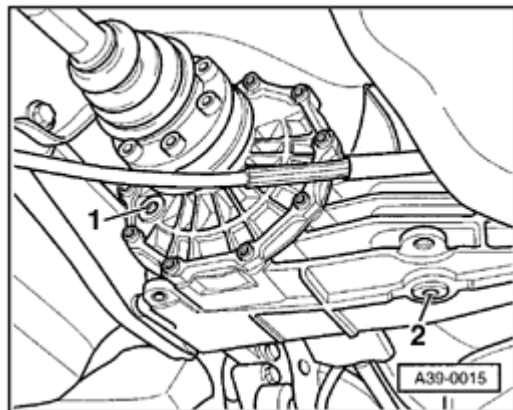

A

- Remove oil filler plug -1- (arrow) to check oil

Specification: oil level up to lower edge of filler hole

- Top off gear oil if necessary, specification ⇒ [Page 00-9](#) .
- Install oil filler plug.

Tightening torque

Component	Tightening torque
Oil filler plug	35 (26 ft lb)