


39-4

Speedometer sender -G22- and drive wheel for speedometer sender, removing and installing

- Transmission installed

Removing and installing speedometer sender -G22-

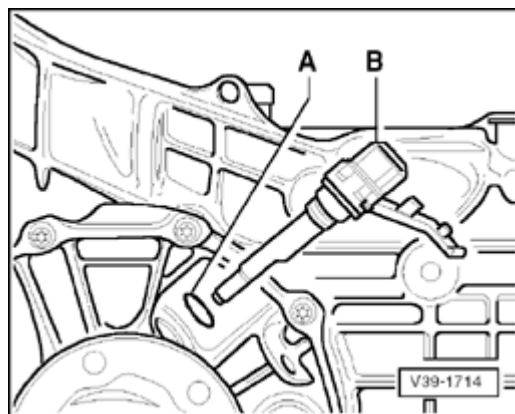


- A**
- Pull connector off sender -B-.
 - Press sender retainer down, turn and pull out sender.
 - Replace O-ring -A-.


Removing and installing drive wheel for speedometer sender -G22-

Removing:

- Detach drive axle from left drive flange -B-.

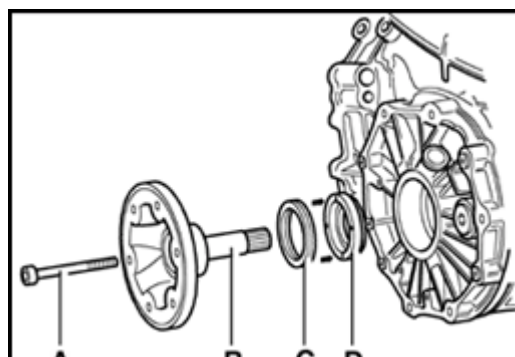

- A**
- Unscrew bolt -A-. Secure drive flange with a drift to prevent it turning.
 - Remove drive flange and seal -C-.

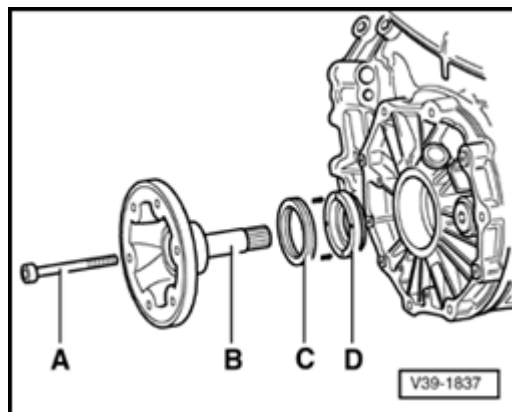**A**

- Using a screwdriver, pry out drive wheel for speedometer sender -D- on alternate sides at the follower lugs (arrows).

Installing:

- Install drive wheel for speedometer sender so that follower lugs (arrows) face toward seal.

Note:

Fit the drive wheel carefully onto the differential, making sure that it is kept straight. Do not use force; the drive wheel can break easily.

Follower lugs engage in differential housing grooves.

- Replace seal for drive flange and install drive flange ⇒ [Page 39-1](#) .
- Top up oil in transmission and check oil level ⇒ [Page 34-39](#) .