


39-80

Oil level in rear final drive, checking

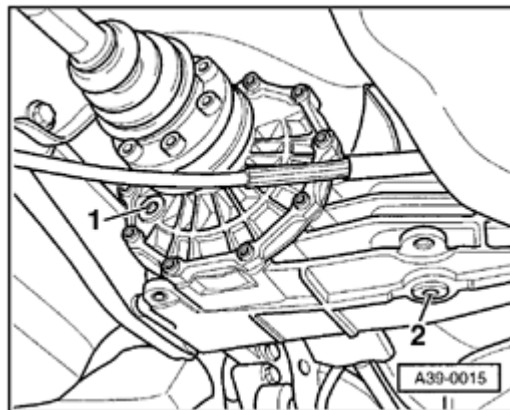

A

- Remove oil filler plug -1- to check final drive oil level.
Specification: oil level up to lower edge of filler hole.
- Top-up gear oil if necessary.
Specification ⇒ [Page 00-6](#) .
- Fit oil filler plug.

Tightening torque

Component	Nm
Oil filler plug	35