


Shift linkage, servicing

Notes:

- ◆ *Lubricate bearing areas and slide surfaces with Polyuric grease G 052 142 A2.*
- ◆ *Adjusting shift linkage ⇒ [Page 34-12](#) .*
- ◆ *To remove the complete shift linkage, remove the exhaust system.*

⇒ *Repair Manual, Engine Mechanical, Repair Group 26*

- ◆ *To disassemble the shift linkage in the installation position, the shift mechanism housing must be lowered.*

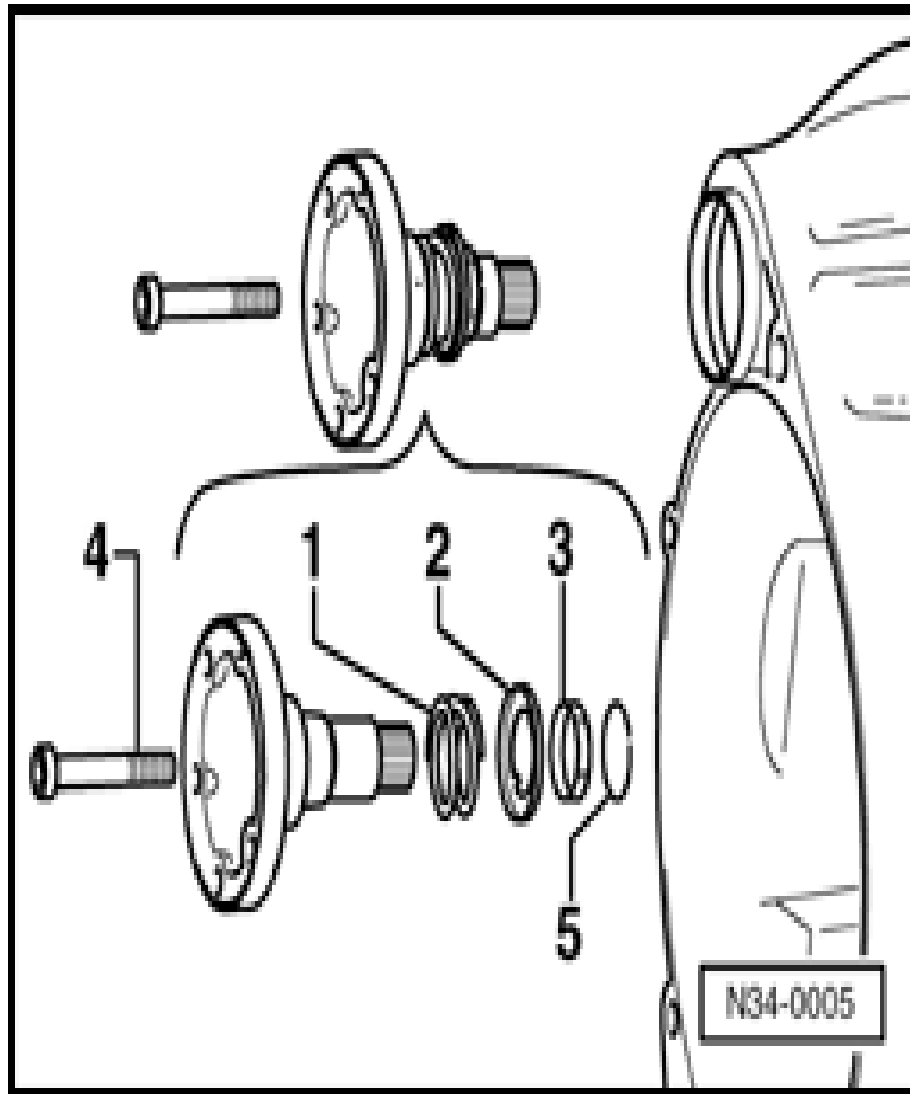

1 - Shift knob

2 - Bushing

3 - Housing cover

- ◆ Carefully pry out latch in rear section of center console

4 - Top part of retaining frame

5 - Bottom part of retaining frame

6 - Bushing

7 - Sleeve

8 - Circlip

- ◆ Do not over-stretch when installing


9 - Spacer bushing

10 - Compression spring

11 - Ball stop

- ◆ Insert compression spring and bushing into the ball stop and assemble on shift mechanism so that compression spring and bushing are on right (direction of travel)

- ◆ Install circlip (item - 23 -) before installing

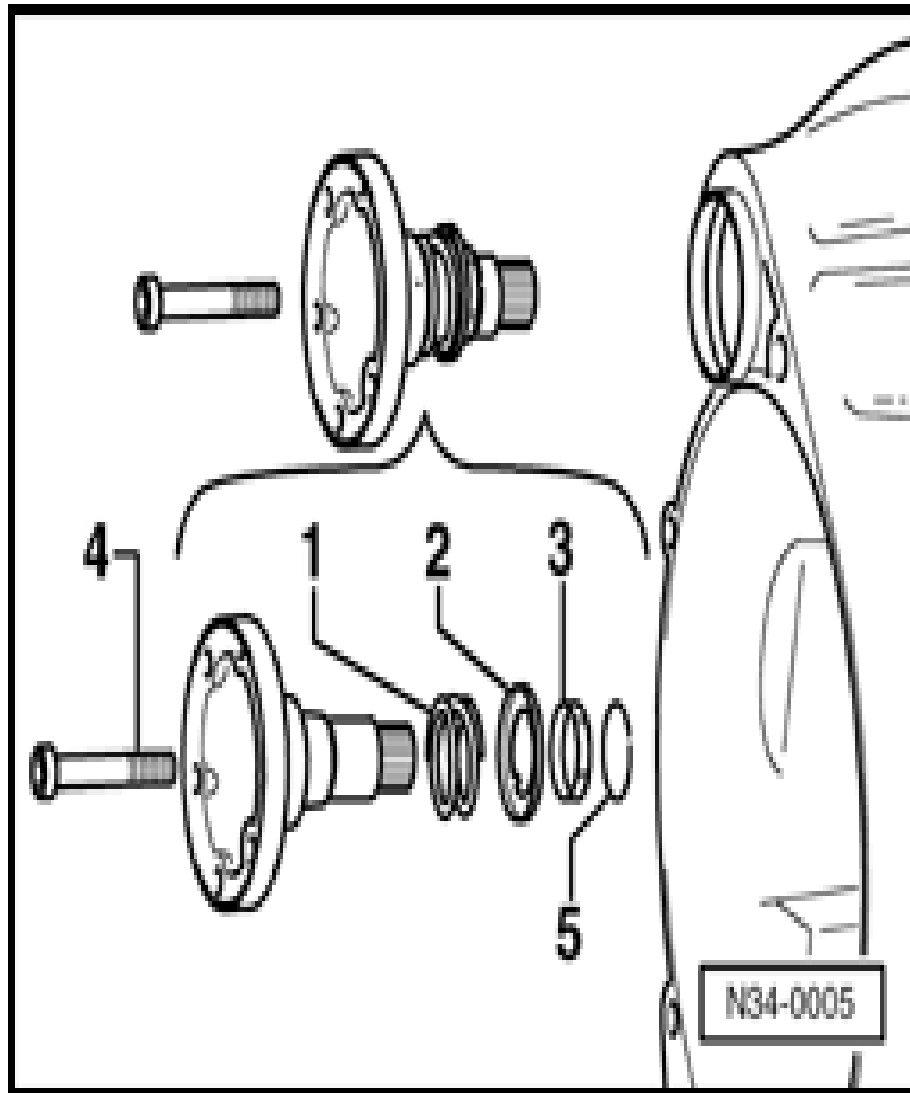

12 - Compression spring

13 - Bushing

- ◆ Rounded side faces shift lever

14 - Shift lever

- ◆ Can be installed into ball housing in one position only

15 - Spacer tube

16 - Nut

- ◆ 8 Nm (71 in. lb)

17 - Nut

- ◆ 8 Nm (71 in. lb)

18 - Cover

19 - Nut


- ◆ 10 Nm (7 ft lb)

20 - Connecting piece

21 - Nut

- ◆ 23 Nm (17 ft lb)

22 - Connecting piece

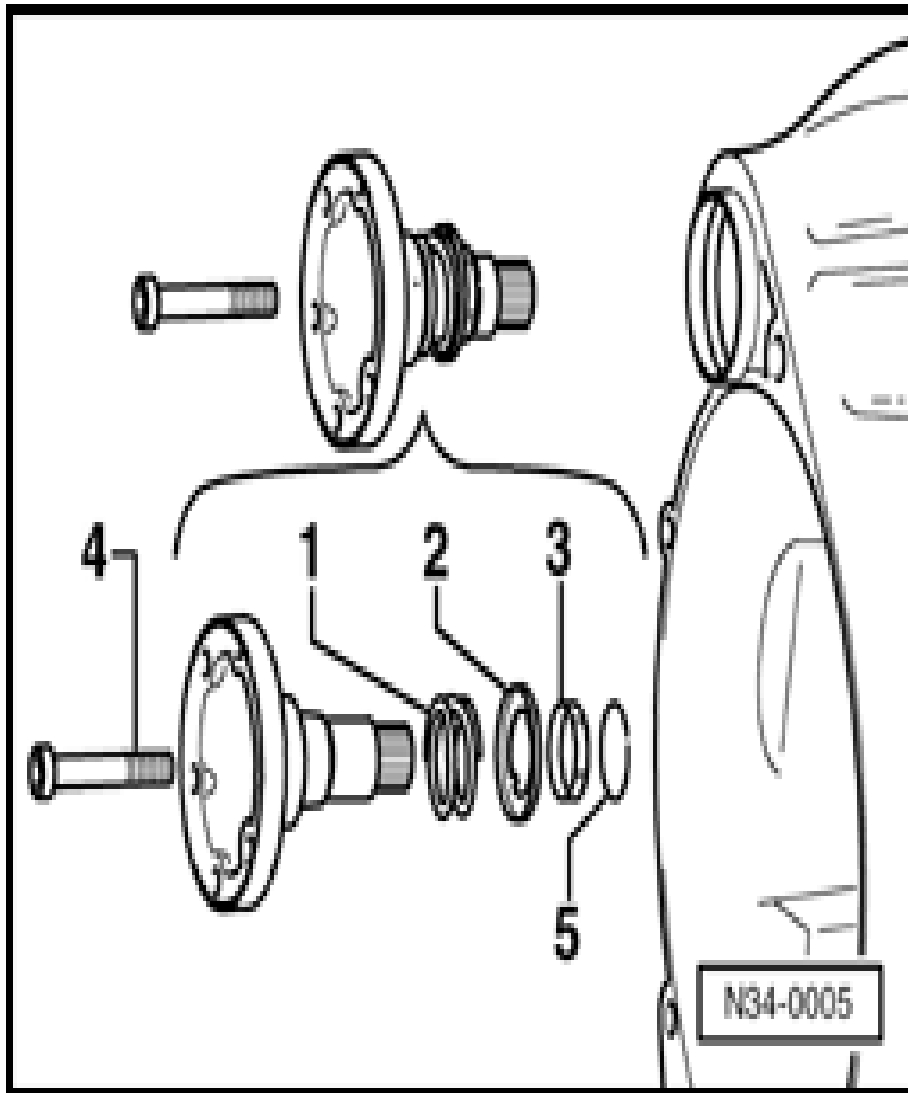**23 - Circlip**

- ◆ Always replace
- ◆ Remove before removing ball stop
- ◆ Rounded side faces ball housing (item - 25 -)

24 - Buffer**25 - Ball housing**

- ◆ Buffers for ball stop on left and right must be in place
- ◆ Insert so that shift detent for reverse gear faces toward left

26 - Rear shift rod**27 - Bolt**

- ◆ 10 Nm (7 ft lb)


28 - Bolt

- ◆ 23 Nm (17 ft lb)

29 - Washer**30 - Shift mechanism housing****31 - Nut**

- ◆ 10 Nm (7 ft lb)

32 - Bolt

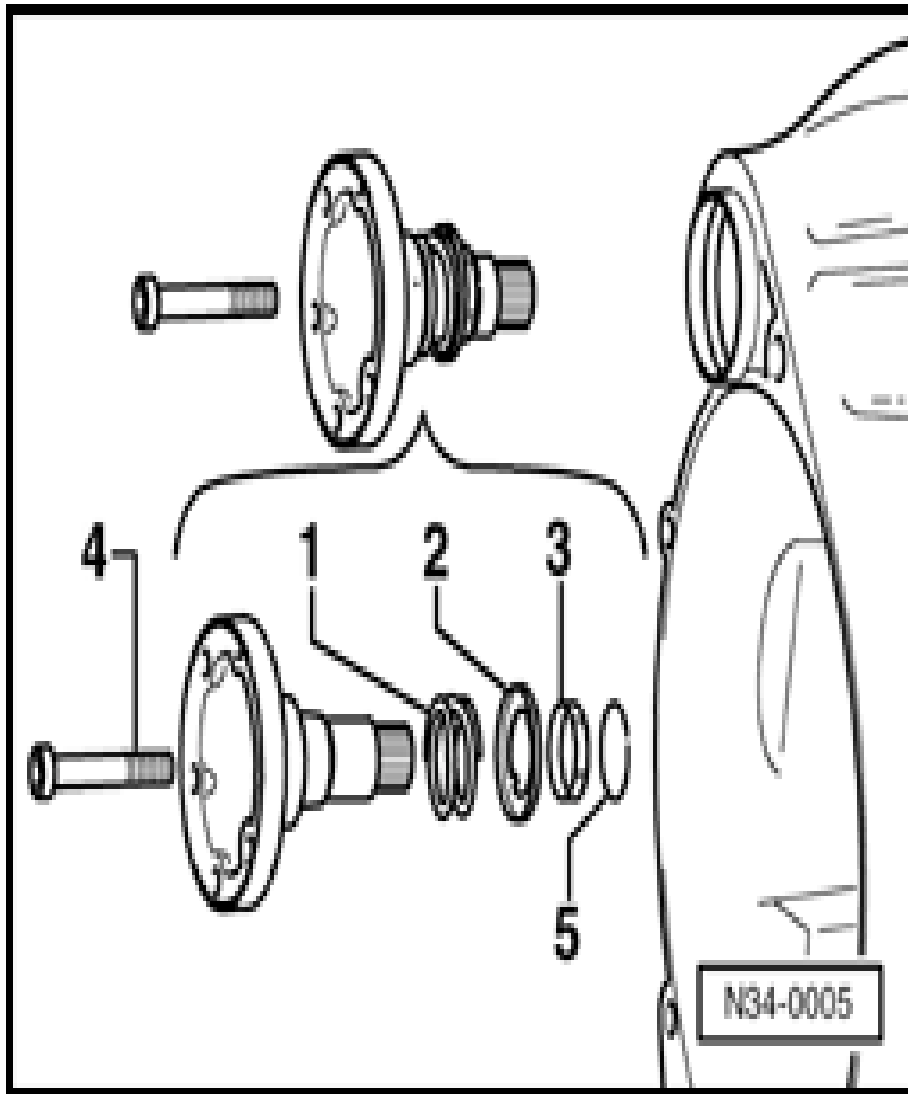**33 - Nut**

- ◆ Always replace
- ◆ 10 Nm (7 ft lb)
- ◆ Self locking

34 - Shift fork**35 - Bolt**

- ◆ 23 Nm (17 ft lb)

36 - Clamp**37 - Shift rod**


- ◆ With shift coupling

38 - Bolt

- ◆ Always replace
- ◆ 23 Nm (17 ft lb)
- ◆ Self locking

39 - Pivot rod

- ◆ Avoid tension by first connecting pivot rod to shift mechanism housing and rear shift rod
- ◆ Hold bolt (item -42-) in place when tightening nut (item -41-)
- ◆ Pivot rod, fastening 06.96 ➤ ⇒ [Fig. 1](#)

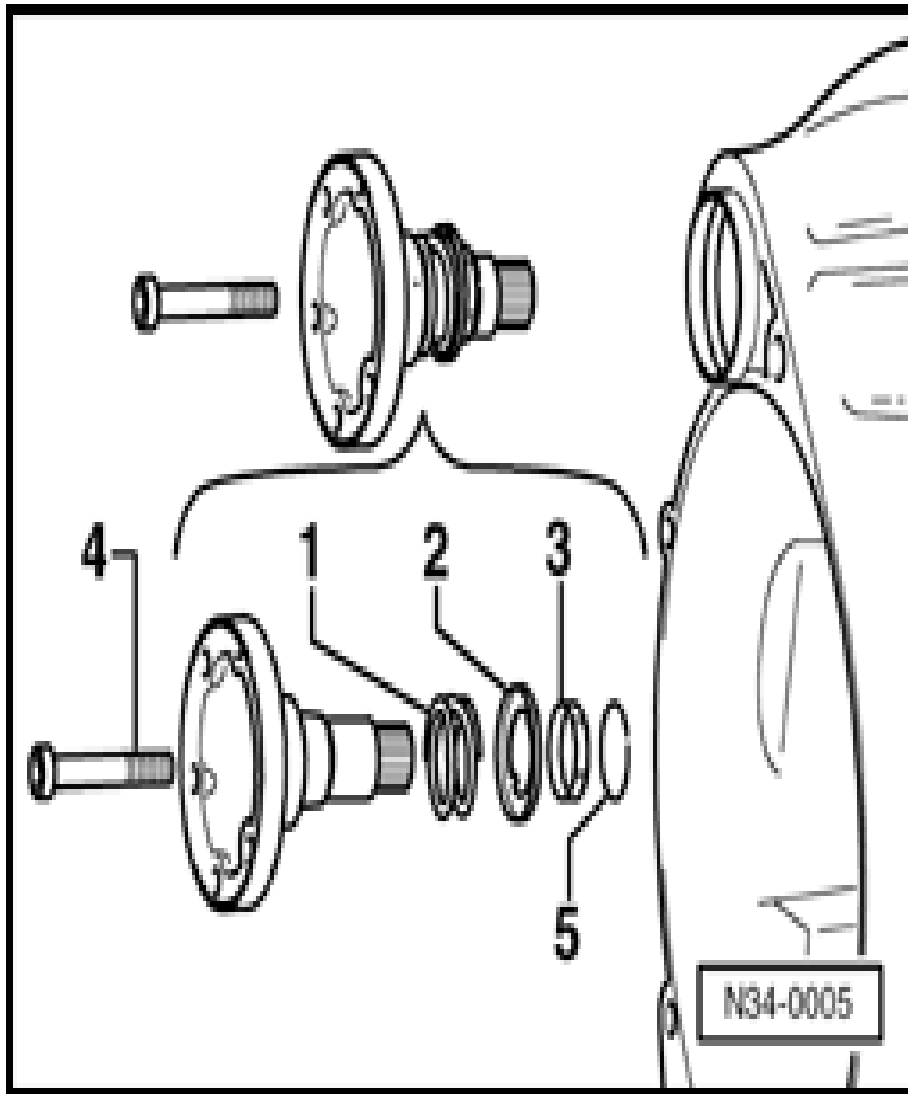**40 - Bolt**

- ◆ 40 Nm (30 ft lb)

41 - Nut


- ◆ 40 Nm (30 ft lb)

42 - Bolt**43 - Mounting bracket for pivot rod**

- ◆ Revised after 06.96 ⇒ [Fig. 1](#)
- ◆ Mounting bracket shown used ➤ 05.96
- ◆ Pivot rod, fastening 06.96 ➤ ⇒ [Fig. 1](#)

44 - Tensioning ring**45 - Boot**

- ◆ To remove and install, remove Three Way Catalytic Converter (TWC) and heat shield
- ◆ Carefully pull over shift rod and pivot rod
- ◆ When installing, place on markings of shift rod and pivot rod

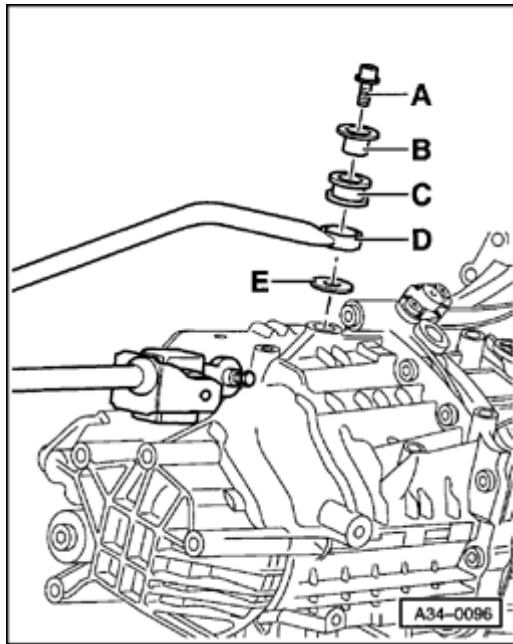

A

Fig. 1 Pivot rod fastening to transmission 06.96 ➤

As of 06.96 the pivot rod is bolted directly to the transmission cover. The additional mounting bracket (⇒ [Page 34-6](#) , item -43-) and its bolts are deleted. For this reason the transmission cover was revised and equipped with an additional mounting point.

A - Socket-head bolt

40 Nm (30 ft lb)

B - Washer

Rounded side faces pivot rod

C - Rubber bushing



D - Pivot rod

E - Washer

Shift mechanism, removing and installing

Removing

- Remove shift knob and housing cover.
- Remove center console ⇒ Repair Manual, Body Interior, Repair Group 70.
- Remove cover.
- A** - Remove cover for shift mechanism housing (arrows).

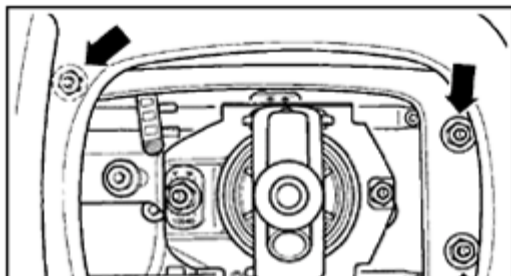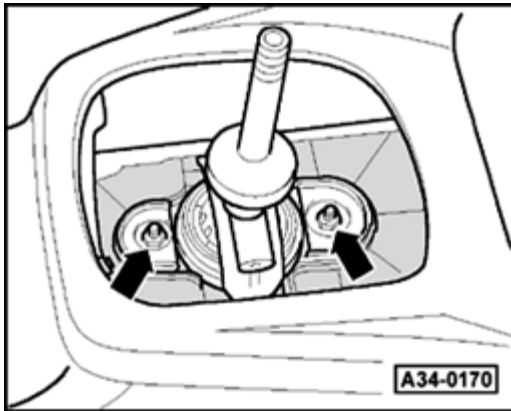


- A** - Remove nuts securing shift mechanism housing (arrows).

- Separate exhaust system behind Three Way Catalytic Converter (TWC); if necessary remove front exhaust system together with Three Way Catalytic Converter (TWC).

⇒ *Repair Manual, Engine Mechanical, Repair Group 26*

- Remove heat shield.

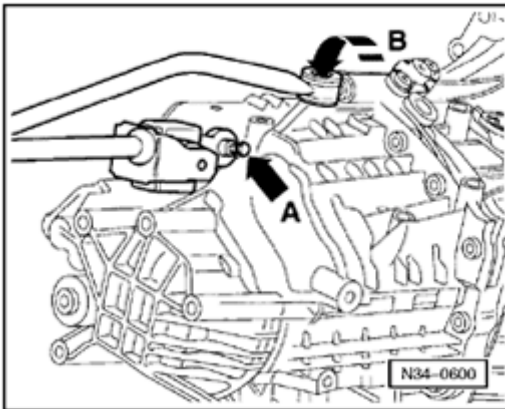


A

- Remove shift rod (arrow -A-).
- Remove socket-head bolt on pivot rod (arrow -B-).
- Swing shift mechanism housing together with shift rod and pivot rod downward and remove.

Installing

Install in reverse order of removal, noting the following:

- Push shift rod on so that securing bolt fits into recess of shift rod.

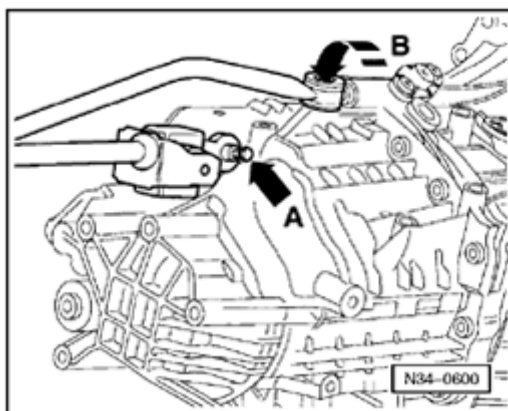

A

- Secure shift rod (arrow -A-).
- Secure pivot rod to transmission (arrow -B-).
- Adjust shift linkage ⇒ [Page 34-12](#) .
- Install heat shield.
- Align exhaust system free of stress.

⇒ *Repair Manual, Engine Mechanical, Repair Group 26*

Tightening torques


Component	Tightening torque
Shift mechanism housing to body	10 Nm (7 ft lb)
Shift rod to transmission	23 Nm (17 ft lb) ¹⁾
Pivot rod to transmission	40 Nm (30 ft lb)
¹⁾ Always replace bolt.	

Shift linkage, adjusting

Requirements

- Components of shift mechanism and linkage must be in proper working condition
- Shift mechanism must move freely
- Transmission, clutch and clutch assembly must be in proper working condition
- Transmission in neutral


- Remove shift knob and housing cover.

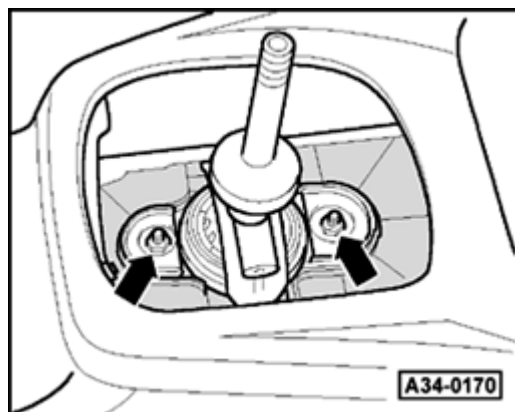

A

- Remove cover for shift mechanism housing (arrows).


- Measure dimension between body opening and rear shift rod (in shift mechanism).

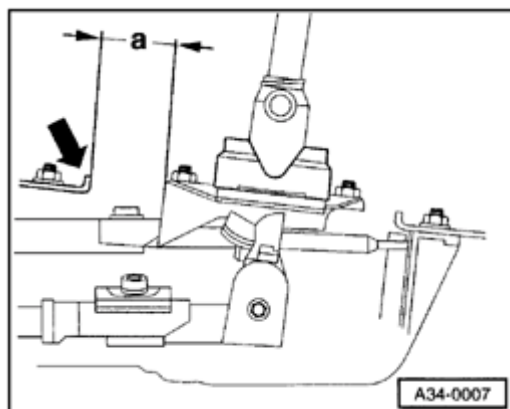

A


Dimension -a-: 37 mm (1.46 in.).

If dimension -a- is not attained:

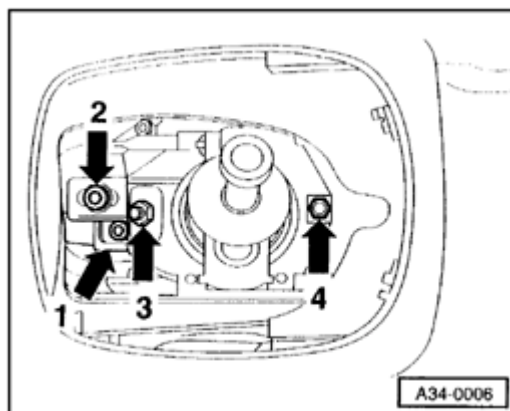


A


- Loosen bolt for pivot rod (arrow -2-).
Rear pivot rod (in shift mechanism) should move freely in both directions on slide.
- Adjust dimension -a- by moving pivot rod (in shift mechanism).
- Tighten pivot rod bolt.
Tightening torque: 23 Nm (17 ft lb).

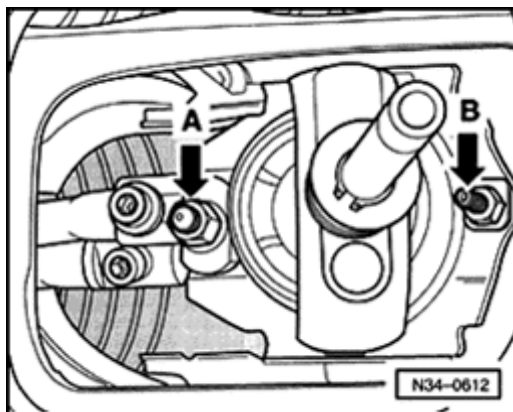

- A**
- Loosen ball housing nuts (arrows -A- and -B-).
 - Align ball housing horizontally ⇒ [Page 34-4](#) , item 25
 - Tighten ball housing nuts (arrows -A- and -B-).
 - ◆ Arrow -A-: 25 Nm (18 ft lb)
 - ◆ Arrow -B-: 10 Nm (7 ft lb)

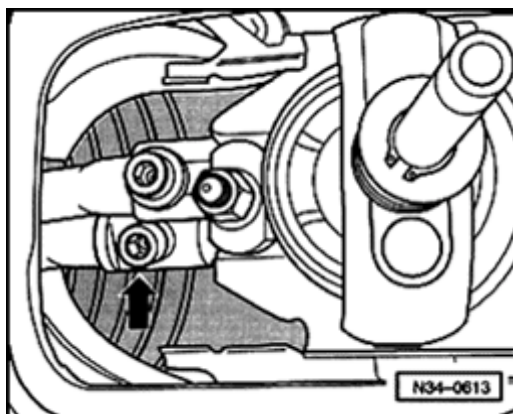

- A**
- Loosen bolt for shift rod (arrow).
Connection between shift rod and shift mechanism must move freely.

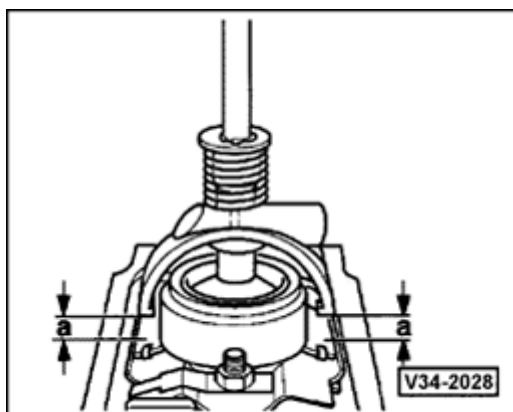

- Align shift lever so it is positioned slightly toward rear.

A

Dimension -a- between ball stop buffers and ball housing should be equal on both sides.

- Have second technician hold shift lever.
- Tighten bolt for shift rod.

Tightening torque: 23 Nm (17 ft lb).

Note:

The position of the shift lever should not change when bolt is tightened.

Shift mechanism adjustment, checking


- Shift lever must rest in 3rd/4th shift gate when transmission is in neutral.
- Operate clutch.
- Make sure all gears can be engaged properly.
- Check operation of reverse gear lock.
- Move shift mechanism into 5th/reverse gear gate and move in direction of reverse gear (do not push shift lever too hard).

The movement up to stop reverse gear lock must be 5-10 mm (0.20-0.40 in.) (measured at shift knob).

- Reduce pressure on shift lever, so it can move back.

Shift lever should return by itself from the 5th/reverse gear gate and move into 3rd/4th gear gate.

- Check fine adjustment if necessary ⇒ [Page 34-17](#) .

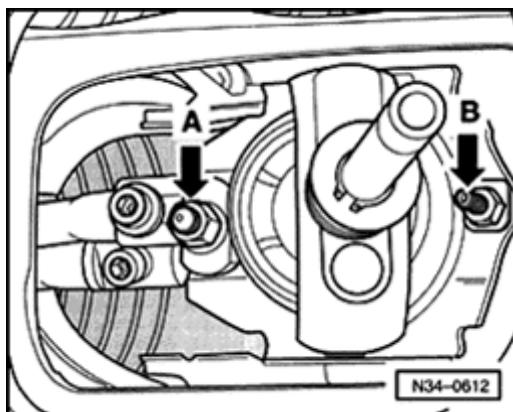

Fine adjustment

If shift adjustment is not OK, proceed as follows:

- A
- Loosen nuts for ball housing (arrows -A- and -B-).
 - Move shift lever together with ball housing to right toward 5th/reverse gear gate up to stop in transmission and hold in position.
 - Press ball housing to left against shift lever.
 - Hold shift lever and ball housing in position and tighten ball housing nuts.
 - ◆ Arrow -A-: 25 Nm (18 ft lb)
 - ◆ Arrow -B-: 10 Nm (7 ft lb)
 - Install covers and shift knob.

Note:

If only 5th gear and reverse gear cannot be engaged, the 5th and reverse gear lock must be checked and replaced if necessary ⇒ [Page 34-69](#).